



66 31 19 Removing and installing sill cover.

- Removing sill cover
- Installing sill cover

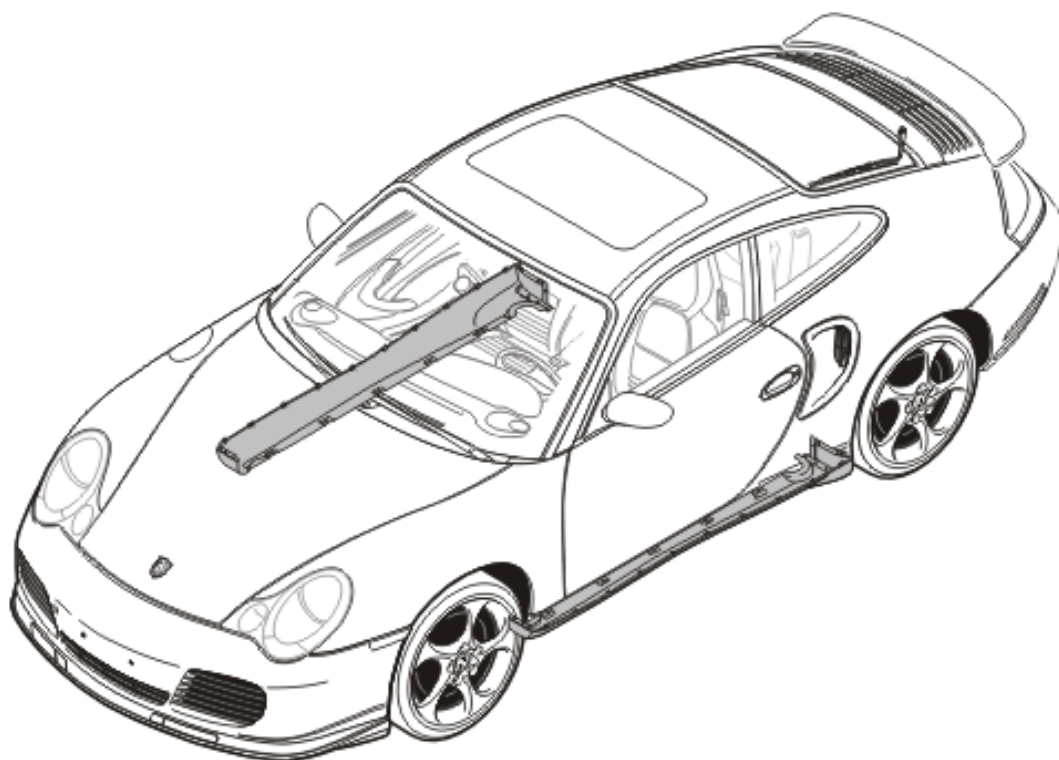


Removing sill cover

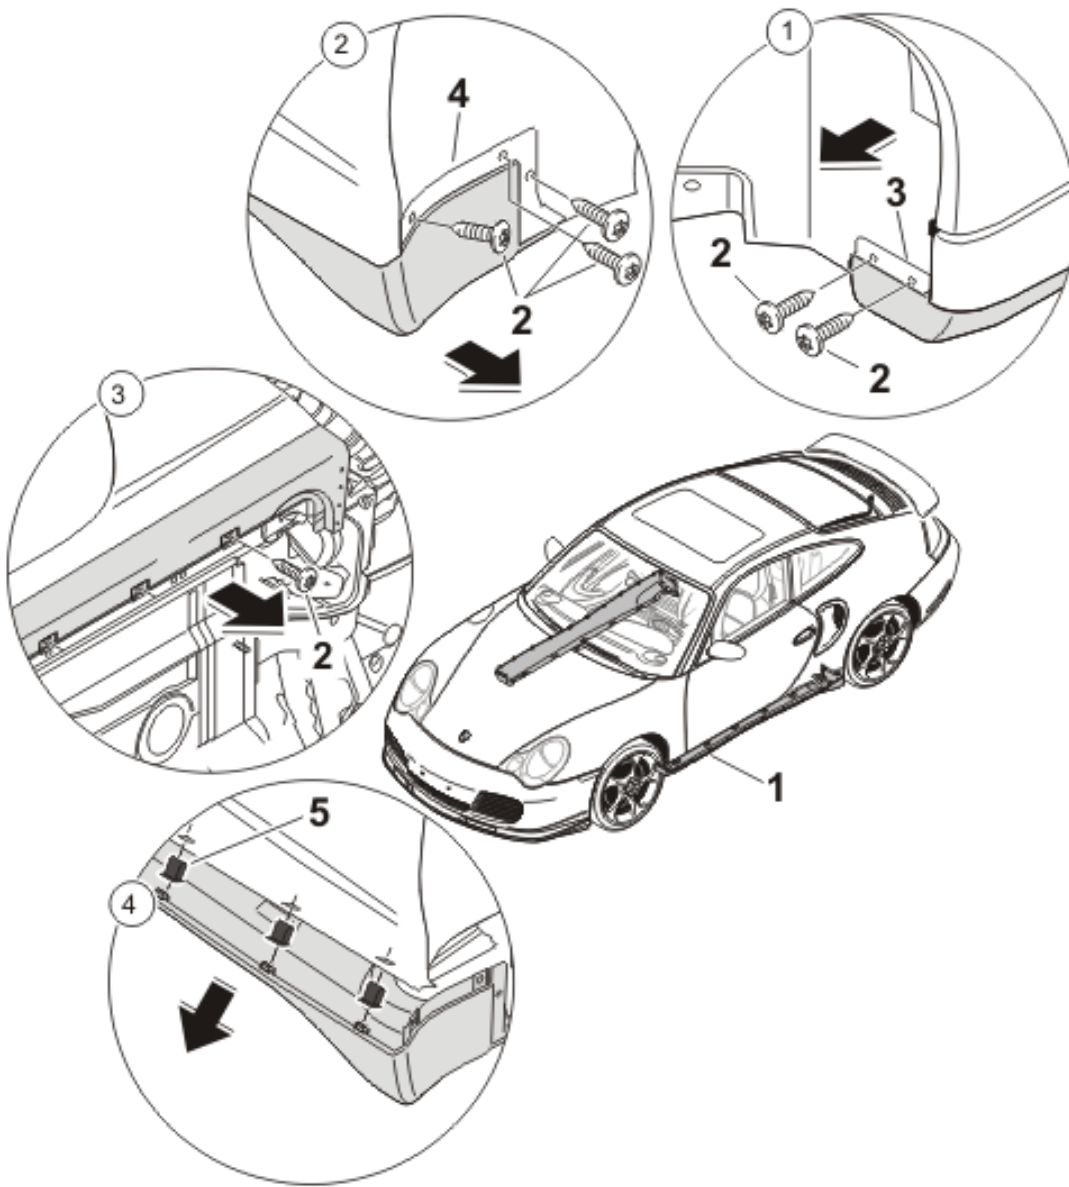

No.	Procedure	Instructions
1	Undoing front sill cover	Unscrew fastening screw -2- from the wheel housing liner -3- .
2	Undoing rear sill cover	Unscrew fastening screw -2- from the rear wheel housing liner -4- .
3	Undoing sill cover on the lower side member	Unscrew fastening screws -2- along the sill cover -1- .
4	Removing sill cover from the lower side member	Remove sill cover from the lower side member in - direction of arrow - . Grommets -5- must always be replaced for installing the sill cover -1- .

Installing sill cover

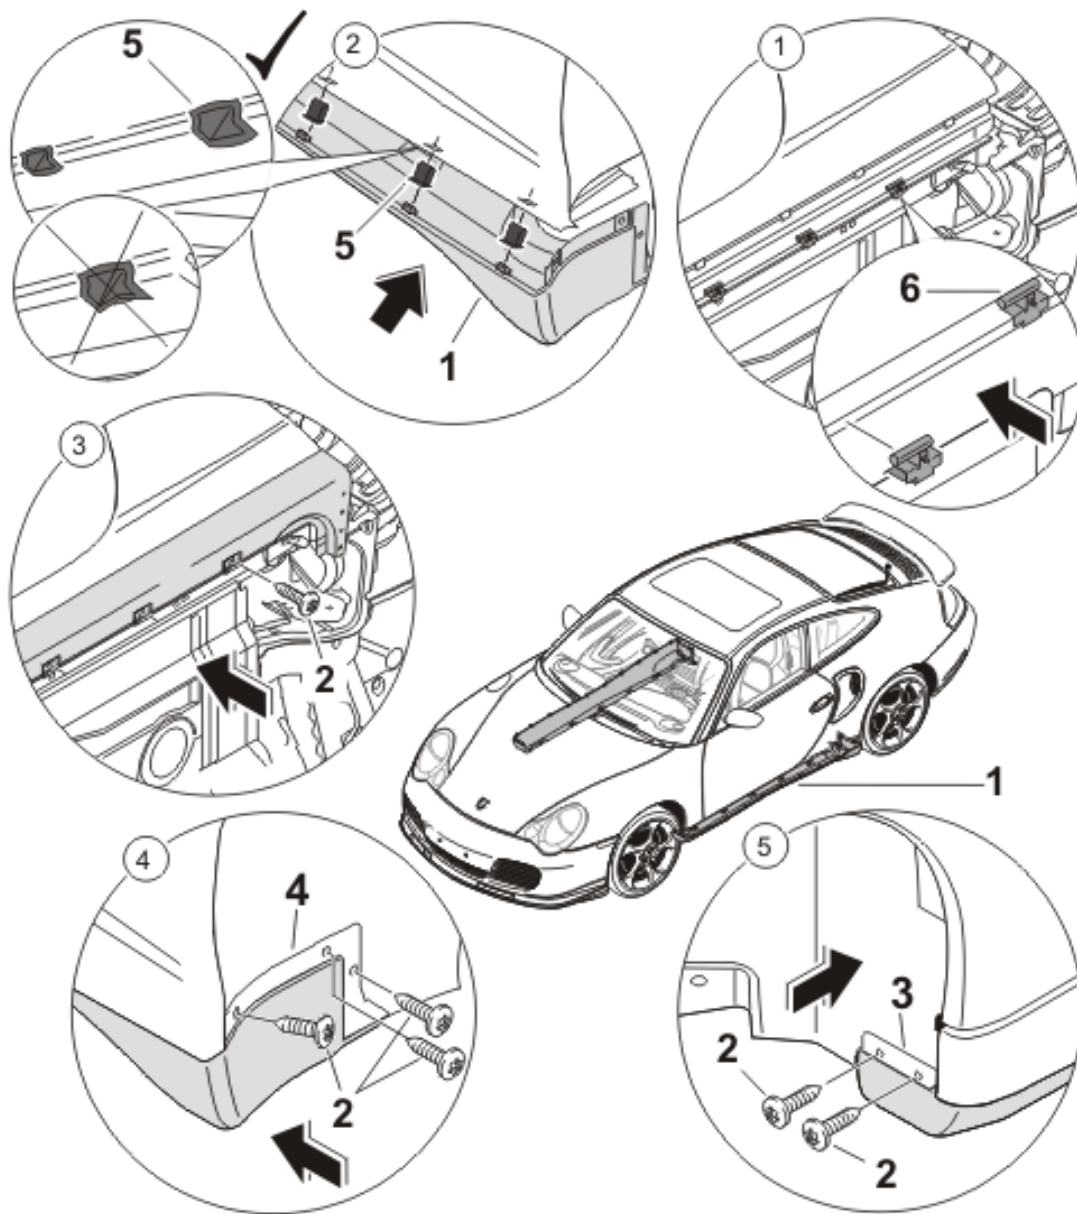

1

No.	Procedure	Instructions
1	Check U-clips and replace if necessary	Check U-clips -6- and replace if necessary. The U-clips must be fixed firmly on the rim of the lower side member.
2	Fitting grommets	All grommets are to be replaced before installing the sill cover -1- . Spray grommets with a lubricant, e.g. silicone spray for simplified mounting of the sill pegs -5- .
3	Fitting sill cover	Position sill cover -1- on the premounted grommets on the side member and tighten with fastening screws -2- .
4	Screwing on rear sill cover	Tighten rear sill cover and the rear wheel housing liner -3- using the fastening screws -2- .
5	Screwing in front sill cover	Tighten front sill cover and the front wheel housing liner -4- using the fastening screws -2- .