



Removing and installing filler flap

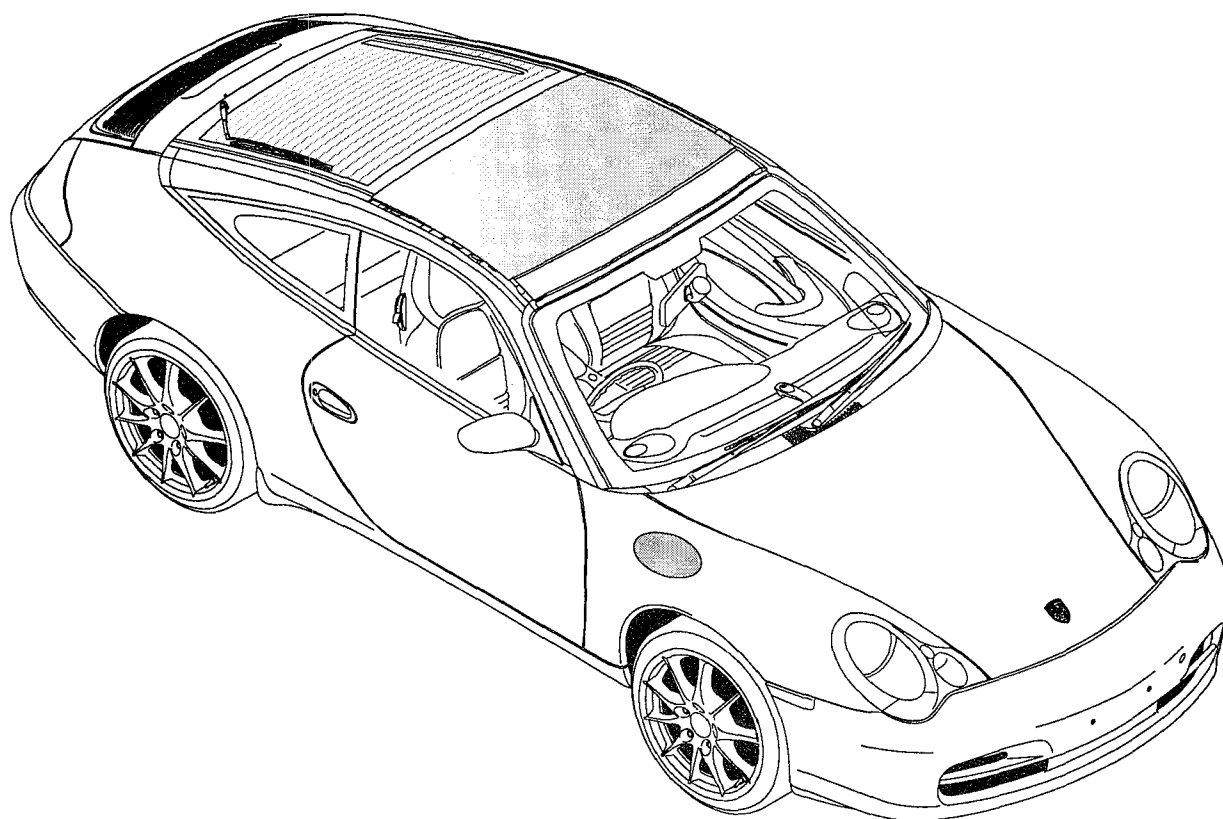

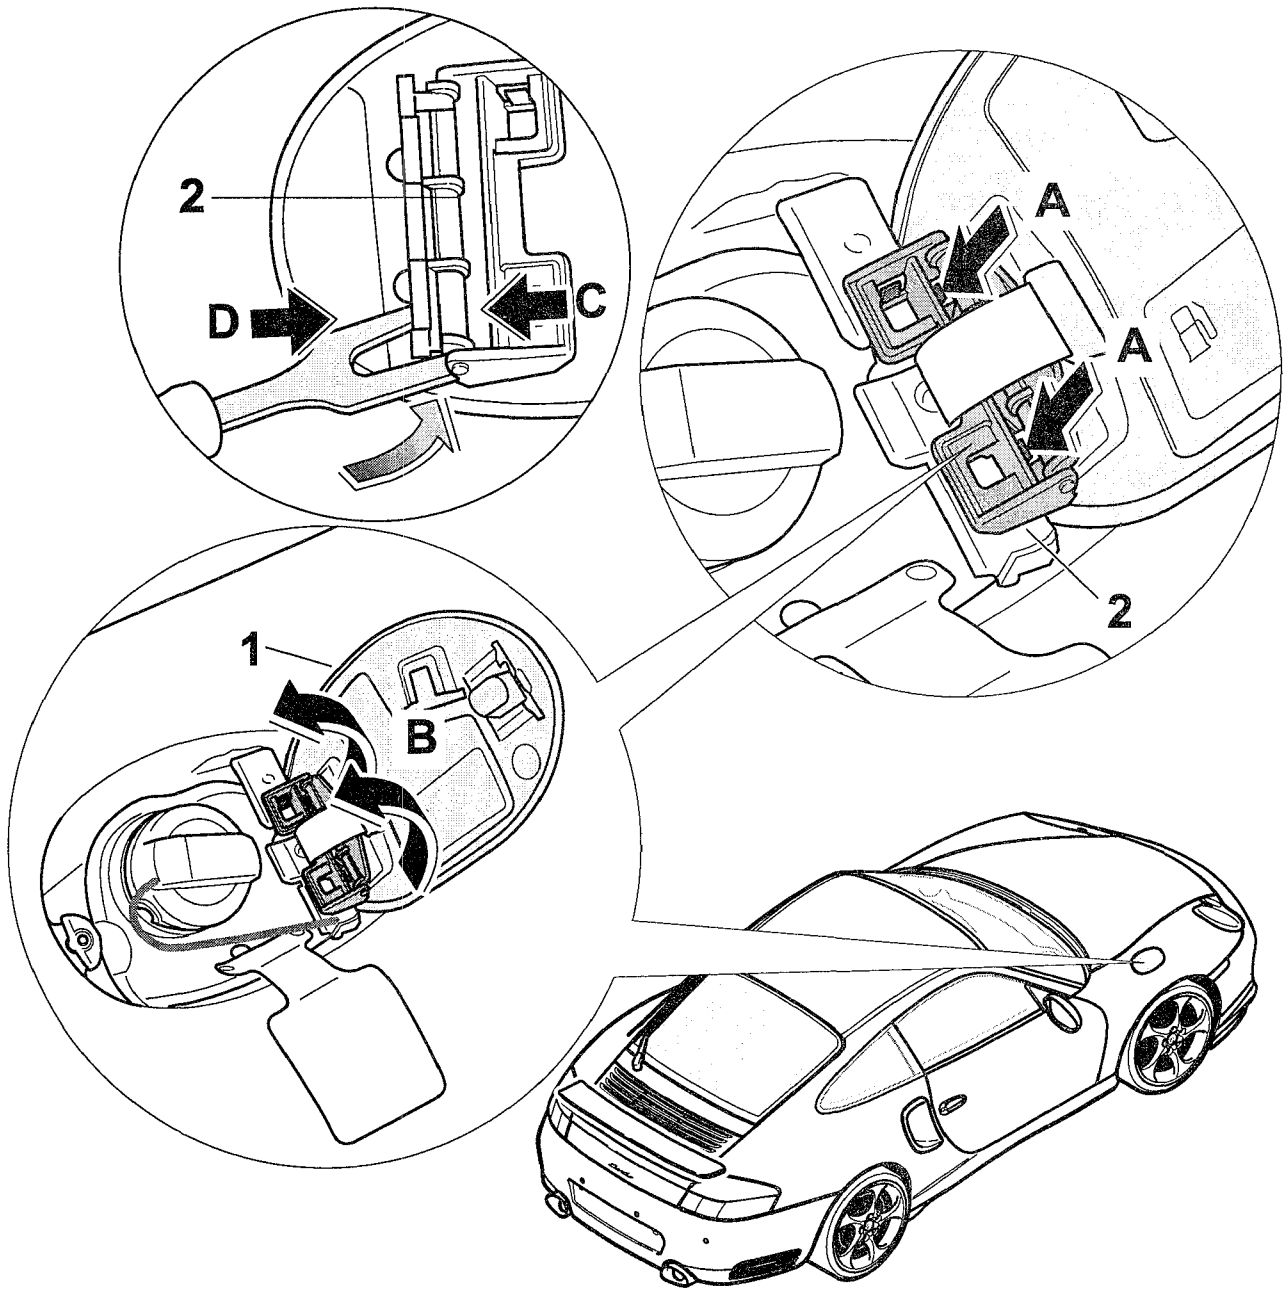

No.	Designation	Qty.	Removal	Installation
1	Filler flap	1	Insert a narrow screwdriver from above in front of the clip -arrow A- , press the fastening lug in -direction of arrow B- and hold, and carefully pull off the filler flap - 1- upwards.	Position the filler flap -1- on the fender cutout and push in. The lugs must engage perceptively.
2	Plastic hinge	1	Insert the removal tool at the locking lugs on the left and right ⇒ "Materials and tools" in 55-31 page 3 and lift via the locking lugs, remove the plastic hinge -2- in -direction of arrow C- from the filler flap -1- .	Position the plastic hinge -2- at the filler flap -1- and push on the -direction of arrow D- . The lugs must engage perceptively.

Materials and tools

Item	Special tool designation	Remarks
-1-	Removal tool No. Nr. 21	⇒ " Commercially available tools" Gr. 2.4; Workshop Equipment Manual