



Cockpit

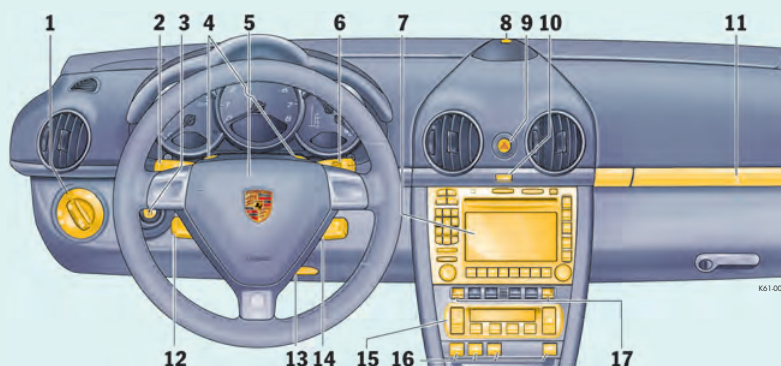

Controls

- 1 Light switch
- 2 Turn signals/
headlight dimmer/flasher lever
- 3 Ignition lock/locking the
steering column
- 4 Hands-free microphone for
telephone
- 5 Horn
- 6 Windshield wiper/washer lever
Rear window wiper
- 7 Porsche Communication
Management/radio
- 8 Interior temperature sensor,
GPS antenna
- 9 Emergency flasher switch
- 10 Central locking button,
readiness display for alarm
system
- 11 Cupholder
- 12 Operating lever for
on-board computer
- 13 Locking lever for
steering-wheel
adjustment
- 14 Operating lever for
cruise control
- 15 Control panel for heat-
ing, ventilation and air
conditioning system
- 16 Buttons for rear spoiler,
Porsche Active
Suspension Management
(PASM), Sport mode,
Porsche Stability
Management (PSM),
Sports exhaust system
- 17 Seat heating, left/right

Ignition lock

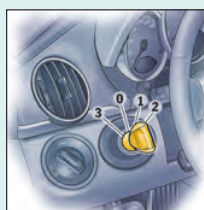

- 0 Initial position
 - 1 Ignition on
 - 2 Start engine
 - 3 Ignition off
- ! The vehicle key
rebounds to the initial
position from every
ignition lock position.

Turn signals/high beam/ parking light/ headlight flasher stalk




- 1,2 Turn signals
 - 3 High beam
 - 4 Headlight flasher
- Low beam = lever in center
position


Parking light

- ▷ Switch ignition off.
- ▷ Press lever up or down.

Light switch

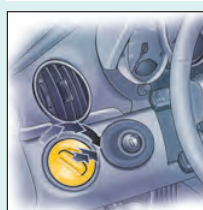

Windshield wiper/ washer system

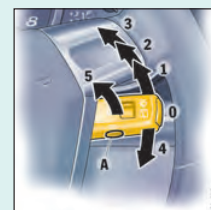

- 0 Off
- 1 Rain sensor
- 2 Slow
- 3 Fast
- 4 One-touch operation
- 5 Spray and wipe
- A Headlight washer system

Rear window wiper - intermittent operation

- ▷ Move wiper lever
forward.

Displays and indicators



- 1 Speedometer with
analogue display
- 2 Tire pressure warning
light
- 3 Turn signal indicator
light left
- 4 Tachometer
- 5 High beam indicator light
- 6 Turn signal indicator
light right
- 7 ABS warning light
- 8 Cooling system:
Temperature gauge,
warning light
- 9 Fuel: Level gauge,
warning light
- 10 Adjustment button for
instrument illumination
and trip counter
- 11 Odometer and daily trip
mileage display
- 12 Automatic speed control
indicator light
- 13 Light sensor for
instrument illumination
- 14 Airbag warning light
- 15 Emission control warning
light (Check Engine)
- 16 Central warning light
- 17 On-board computer
display
- 18 Porsche Stability
Management
Multifunctional PSM light
- 19 Brake warning light
- 20 Safety belt warning light
- 21 Tiptronic indicator
- 22 Clock and outside
temperature display
- 23 Adjustment button for
clock

On-board computer



Switching selection field on or off:

- ▷ Push operating lever
forward or back.

Selecting functions:

- ▷ Push lever up 3 or
down 4.

To confirm selection:

- ▷ Push the lever forward 1.

To move back several selection levels:

- ▷ Pull lever back 2.
- Or -
- ▷ Select arrow in the on-
board computer display
and push lever forward 1.

Tiptronic S



Indicates the selector lever
position and the engaged
gear when the engine is
running.

The display flashes if the
selector lever is between
two positions.

- ▷ Engage the selector lever
correctly.


Oil level indicator



Oil level measurement in the on-board computer:

- ▷ Switch ignition on (do not
start the engine).
- ▷ Allow waiting time to
elapse.
- ▷ Read off engine oil level
on the segment display.

Seat

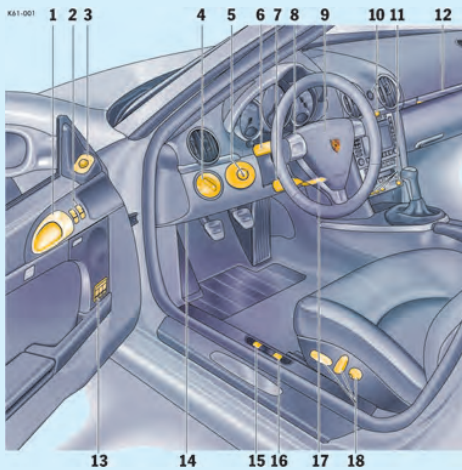

- 1 Inner door handle
- 2 Power windows
- 3 Door mirror control
- 4 Light switch
- 5 Ignition / starter switch
- 6 Turn signal / headlight dimmer, flasher lever
- 7 Operating lever for on-board computer
- 8 For vehicles with Tiptronic:
Toggle switches for Tiptronic
- 9 Horn
- 10 Emergency flasher switch, central locking switch
- 11 Switches for rear spoiler,
Porsche Active Suspension Management (PASM),
Sport mode,
Porsche Stability Management (PSM),
Sports exhaust system
- 12 Cupholder
- 13 Switch for seat memory
- 14 Diagnostic socket
- 15 Switch for front luggage compartment release
- 16 Switch for rear lid release
- 17 Steering-wheel adjustment
- 18 Seat adjustment

Seat memory



- M** Memory button
1 Key button
2, 3 Person buttons


Storing position:

- ▷ Switch on the ignition.
- ▷ Set position.
- ▷ Keep memory button **M** depressed and additionally press person button **2** or **3**.

Recalling position:

- ▷ Switch ignition on or open the driver's door.
- ▷ Press person button until the seat has reached its final position.

Comfort seat/sports seat

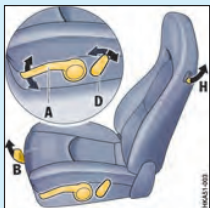

Manually adjustable seat



Electrically adjustable seat


- A** Seat height
- B** Fore and aft
- C** Seat inclination
- D** Backrest angle
- E** Lumbar support
(pelvis and spinal column support)
- F** Backrest side bolster adjustment
(sports seat only)
- G** Seat cushion side bolster adjustment
(sports seat only)
- H** Folding the backrest forward and back

Entry

Safe and convenient starting

- The engine in your Porsche Cayman is very powerful. Bear this in mind when driving.
- ▷ Familiarize yourself with the displays and controls.
 - ▷ Adjust the interior mirror and door mirrors before you start driving.
 - ▷ Adjust the seat, belt and steering wheel positions to suit your size.
 - ▷ You and your passenger should fasten your seat belts.

Key with remote control

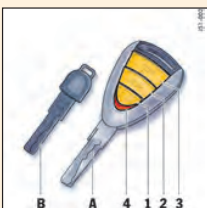

- A** Main key
- 1** Central locking button
- 2** Button for front luggage compartment lid
- 3** Button for rear lid
- 4** Light-emitting diode
- 5** Spare key

Locking, alarm system

There are two locking options:

- ▷ Press button **1** once.
The alarm system and passenger compartment monitoring system are activated. Doors cannot be opened, either from outside or from inside.
- ▷ Press button **1** twice.
Alarm system is activated, passenger compartment monitoring system is off and doors are locked.

- !** Doors can be opened by pulling the inner door handle twice.
This will trigger the alarm system.

Switching off the alarm system if it is triggered accidentally

- ▷ Unlock the vehicle.

Unlocking:

- ▷ Press button **1**.
Vehicle is unlocked.
- !** If you unlock the vehicle using the remote control and do not open a door within 1 minute, the vehicle will be locked again automatically.

Unlocking front luggage compartment lid or rear lid

- ▷ Press appropriate button for approx. 2 seconds.

Helpful tips

Remote control standby

The remote control standby function switches off after 7 days if the vehicle is not unlocked or started within this time.

- ▷ In this case, unlock the driver's door at the lock.

Leave the door closed in order to prevent the alarm system from being triggered.

- ▷ Press button **1** on the remote control.
The remote control is activated again.

Immobilizer

If you leave the ignition on for more than two minutes without starting the engine, the immobilizer will be reactivated.

Deactivating:

- ▷ Switch ignition off (position "3").
- ▷ Start the engine.

Emergency operation

Doors, front luggage compartment lid, and filler flap can be operated by hand if there is a technical fault.

Tools, etc.

A tool kit with towing hook and tire sealant can be found in the tool box in the front luggage compartment. If the vehicle is equipped with a Porsche Ceramic Composite Brake, always observe the instructions in the Owner's Manual in the event of a flat tire.

Servicing

The addresses and telephone numbers of Porsche dealerships are shown in the dealer directory.

Additional information

This Quick Reference Guide does not replace the Owner's Manual. Warnings in particular are not replaced by the Quick Reference Guide.

Automatic transmission and electronics

Tiptronic S



Tiptronic S is a 5-speed automatic transmission:

- D:** Automatic gear-changing
M: Manual gear-changing using rocker switches on the steering wheel


You can change between selector lever position **D** and **M** as you wish while driving.

Switch in the center console



- SPORT** Switching Sport mode on and off
SPORT Sports exhaust system
PSM OFF Switching PSM on and off
 Switching PASM on and off
 Manually extending/retracting rear spoiler

Automatic Air Conditioning System/Air Conditioning

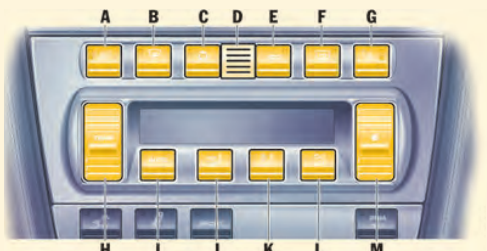

- A** Seat heating, left
B Defrosting the windshield
C Circulating-air button
D Temperature sensor
E ECO button (air-conditioning compressor on/off)
F Heated rear window/door mirror heating
G Seat heating, right
H Temperature button
I AUTO button (automatic mode)/AC max
J Air distribution to footwell
K Air distribution to central and side vents
L Air distribution to windshield
M Blower speed button

ParkAssist

- ▷ Engage reverse gear. A brief signal tone sounds.
 A detected obstacle is signalled by an intermittent tone. The intervals decrease as the obstacle is approached.
 A continuous tone sounds when the distance becomes less than one foot.

Speed control



- A** Switching off/on
1 +SPEED/SET (accelerate/store)
2 -SPEED (decelerate)
3 OFF (interrupt)
4 RESUME

The speed control maintains any selected speed between 15 and 145 mph (30 and 240 km/h).

Pit stop

Unlocking front luggage compartment lid/rear lid



- ▷ Operate the appropriate pull-button next to the driver's seat.
A Opening front luggage compartment lid
B Opening the rear lid
 ▷ The luggage compartment lids can also be unlocked with the radio remote control.

Fuel and engine oil

- Fuel tank** Refill volume approx. 16.9 U.S. gallons (64 liters), including approx. 2.6 U.S. gallons (10 liters) reserve
Fuel octane rating Premium fuel with 98 RON (93 CLC or AKI).

I If fuels with octane numbers of 95 RON (90 CLC or AKI) are used, the engine's knock control automatically adapts the ignition timing.

The engine is designed for oils with ACEA, API and ILSAC specifications, with the following viscosity values: **Above -13°F/-25°C:** SAE 0W-40, 5W-40 and 5W-50.

Below -13°F/-25°C: SAE 0W-40.

Use only engine oils approved by Porsche. If in doubt ask your authorized Porsche dealer for tested and approved all-season oils.

Washer fluid



Capacity

- Approx. 0.66 U.S. gallons (2.5 liters) without headlight washer
- Approx. 1.59 U.S. gallons (6.0 liters) with headlight washer

Car care

Please observe the following:

High-pressure cleaning equipment may damage tires, logos, emblems, painted surfaces, the generator and the sensors of ParkAssist.

- ▷ Maintain a minimum clearance of 21in. (50 cm) and do not direct the spray directly onto the aforementioned components.

Before cleaning in a car wash:

- ▷ Ask the car wash operator about special wheel widths and accessories such as mounted equipment on the roof, fixed rear spoiler, highly polished wheels.
 ▷ Switch off wipers (intermittent mode, rain sensor).
 ▷ Unscrew external antenna.

Engine data

	Cayman	Cayman S
Engine type	M 97/20	M 97/21
Type	Horizontally opposed engine, liquid-cooled	Horizontally opposed engine, liquid-cooled
Number of cylinders	6	6
Cubic capacity	163.96 cu. in./2687 cm ³	206.67 cu. in./3387 cm ³
Net-horsepower, SAE J 1349 at crankshaft speed	245 hp/180 kW 6500 rpm	295 hp/217 kW 6250 rpm
Net torque, SAE J 1349 at crankshaft speed	201 ft. lb./273 Nm 4600 - 6000 rpm	251 ft. lb./340 Nm 4400 - 6000 rpm
Engine oil consumption	up to 1.5 l/1000 km	up to 1.5 l/1000 km
Maximum rpm	7300 rpm	7300 rpm

Driving performance*

	Manual transmission	Tiptronic S
Cayman		
Top track speed		
5-speed transmission	160 mph/258 km/h	157 mph/253 km/h
6-speed transmission	162 mph/260 km/h	
Acceleration 0 - 60 mph	5.8 seconds	6.7 seconds
Acceleration 0 - 100 km/h (62 mph)	6.1 seconds	7.0 seconds
Cayman S		
Top track speed	171 mph/275 km/h	166 mph/267 km/h
Acceleration 0 - 60 mph	5.1 seconds	5.8 seconds
Acceleration 0 - 100 km/h (62 mph)	5.4 seconds	6.1 seconds

* At DIN empty weight and half load, without performance-inhibiting extra equipment.

Tire pressure for cold tires

The specified tire filling pressures apply only to the tire makes and types approved by Porsche.

17, 18-inch wheels	front 29 psi (2.0 bar) / rear 36 psi (2.5 bar)
19-inch wheels	front 32 psi (2.2 bar) / rear 36 psi (2.5 bar)

This Quick Reference Guide does not replace the Owner's Manual. Warnings in particular are not replaced by this Quick Reference Guide.