


Emergency unlocking of the luggage compartment lids

If the battery is discharged, the lids can be opened only with the aid of a donor battery.

Unlocking lids


1. Use the key to unlock the vehicle at the door lock.
Leave the key in the door lock.
2. Remove plastic cover over the fuse box.
3. Pull out positive terminal **A** in the fuse box.
4. Use a jumper cable to connect the positive terminal of the donor battery with positive terminal **A** in the fuse box.

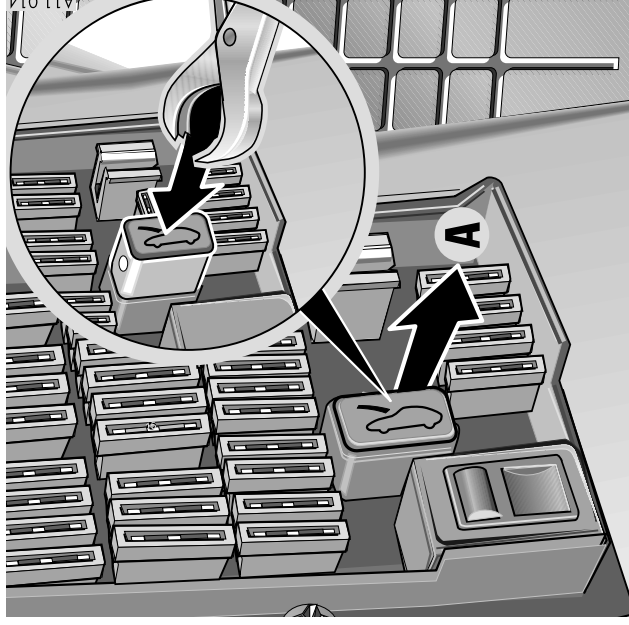

Note

If the vehicle was locked, the alarm horn will sound when the negative cable is connected.

5. Use the second jumper cable to connect the negative terminal of the donor battery with latch striker **B**.
6. Switch the alarm system off by locking and unlocking at the door lock.
7. Unlock the luggage compartment lid with the switch.

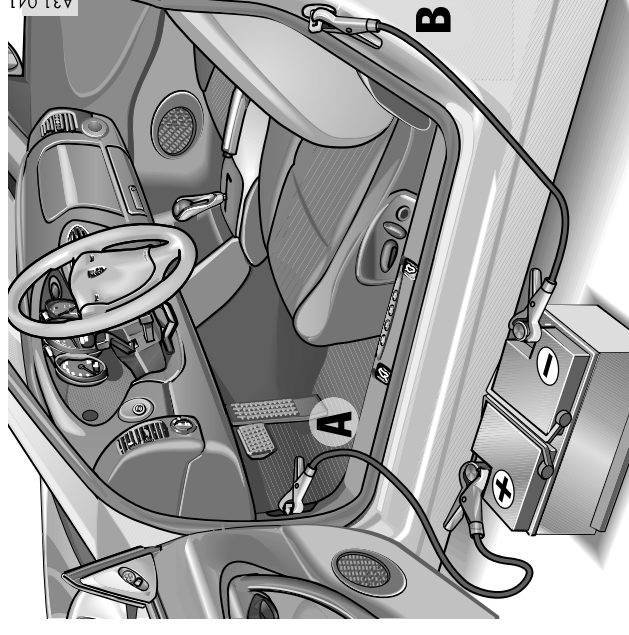

8. Disconnect the negative cable first, then the positive cable.

9. Push positive terminal **A** into the fuse box and push on the plastic fuse box cover.

Note

The engine cannot be started with this method. Please observe the chapter "Emergency Starting with Jumper Cables" for this purpose.